


HYPERION EOS0610iNET Ports & Net Cable


LADER 1 (MASTER)

LADER 2 (SLAVE) (slave)

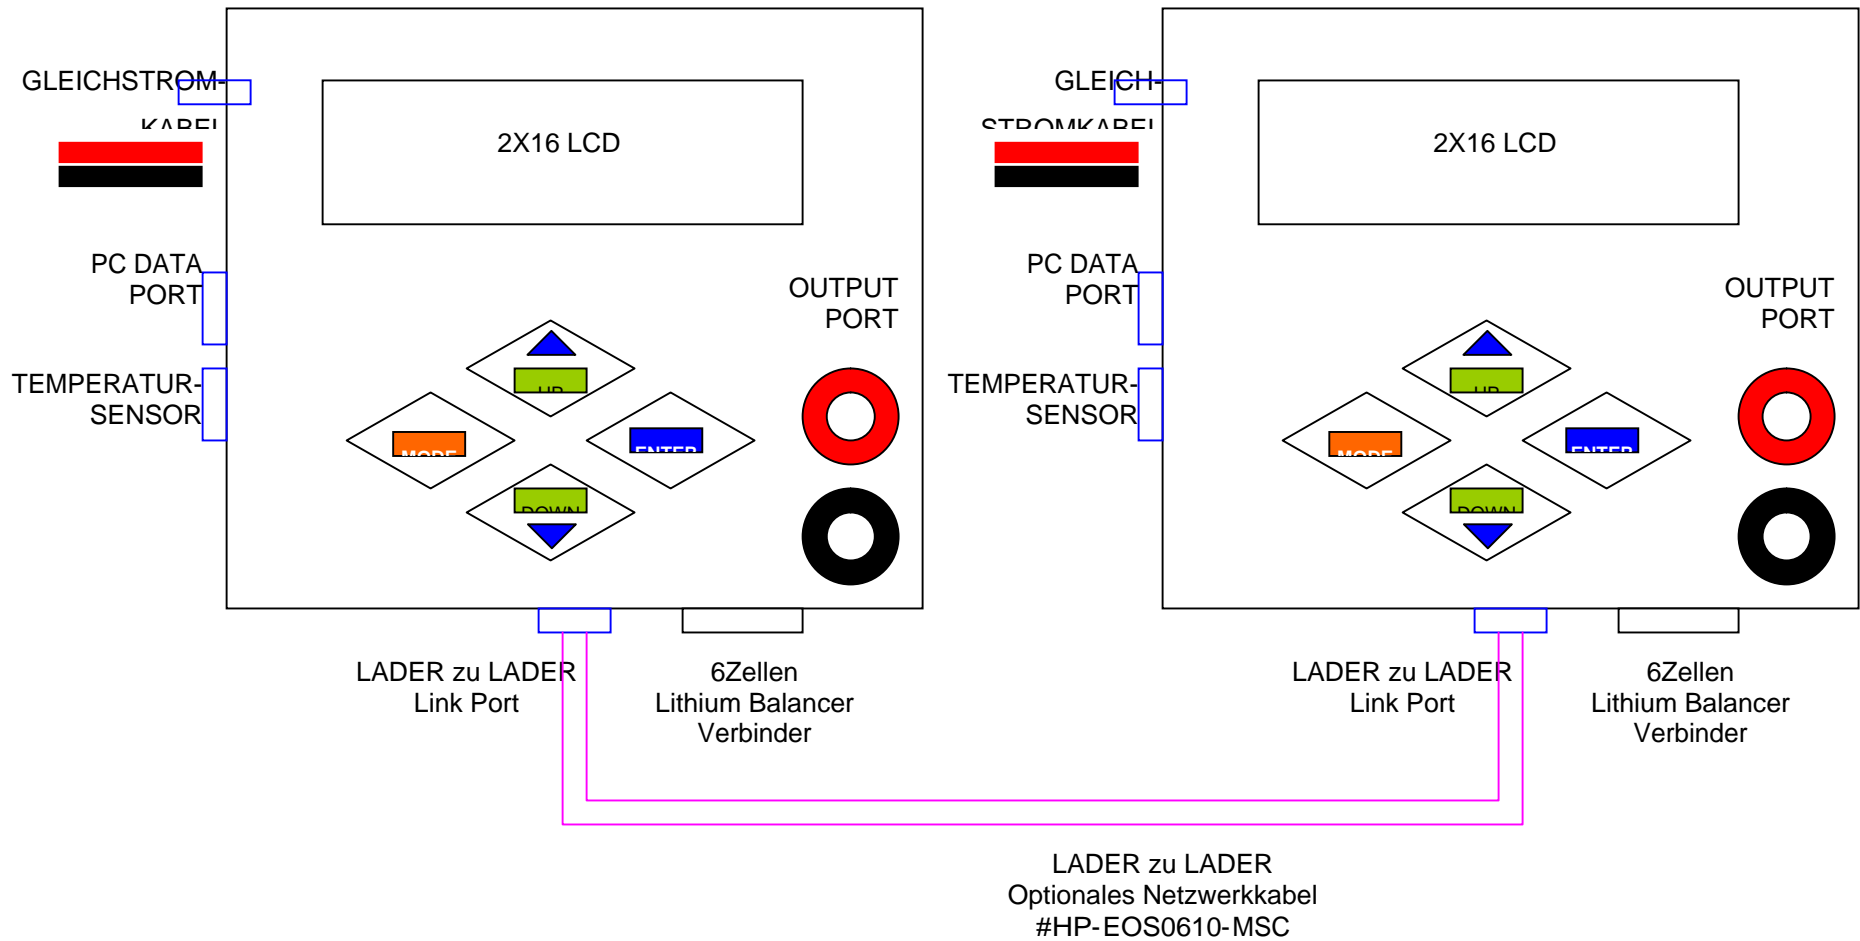


MENU FLOW CHARTS

MASTER

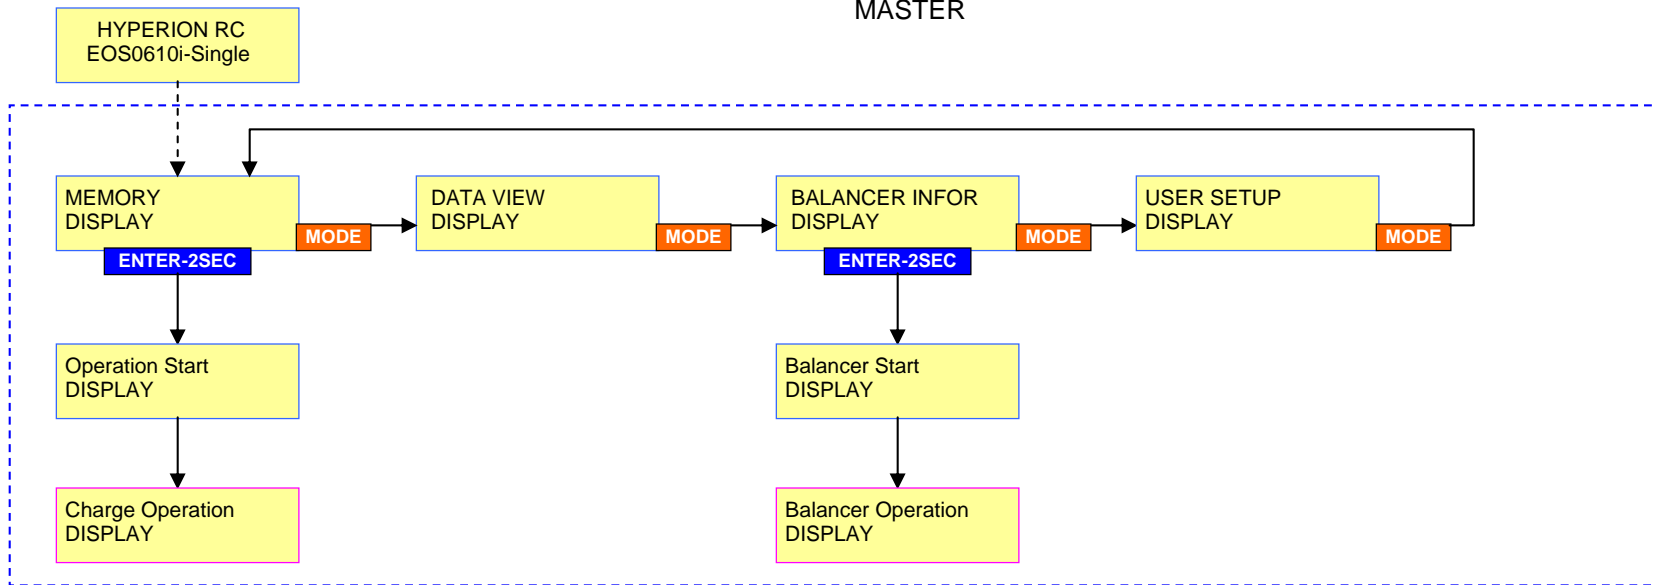


SLAVE

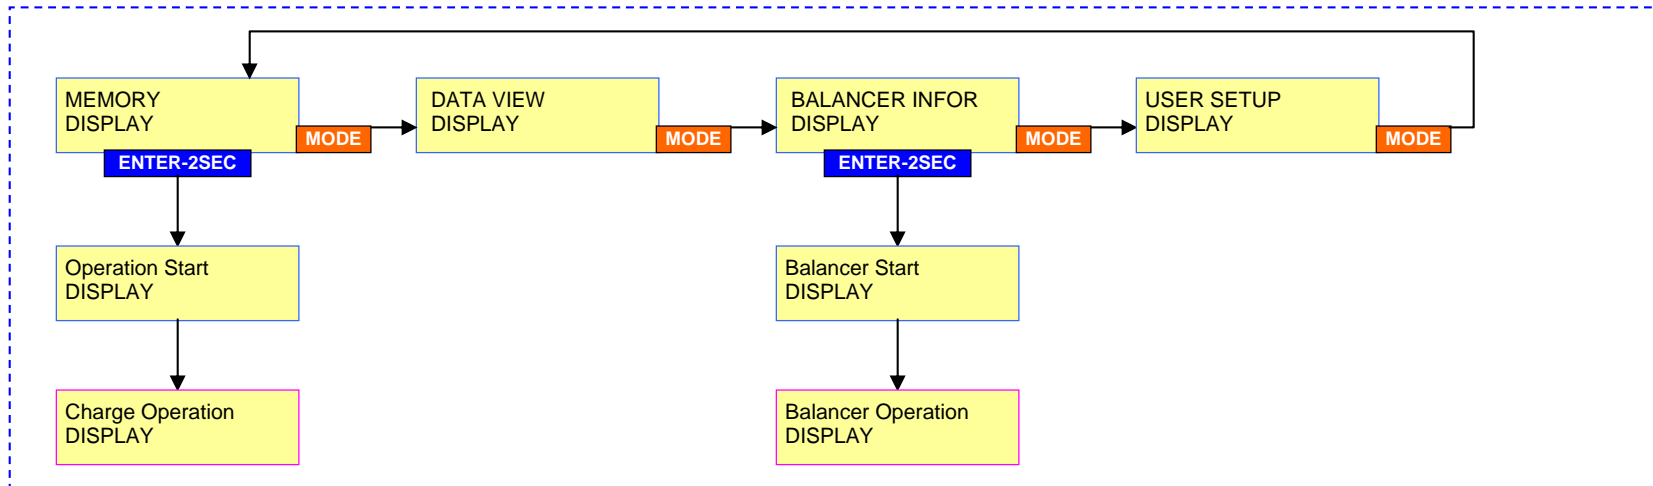


MEMORY (CHARGE) DISPLAY


Lilo/LiPo/A123

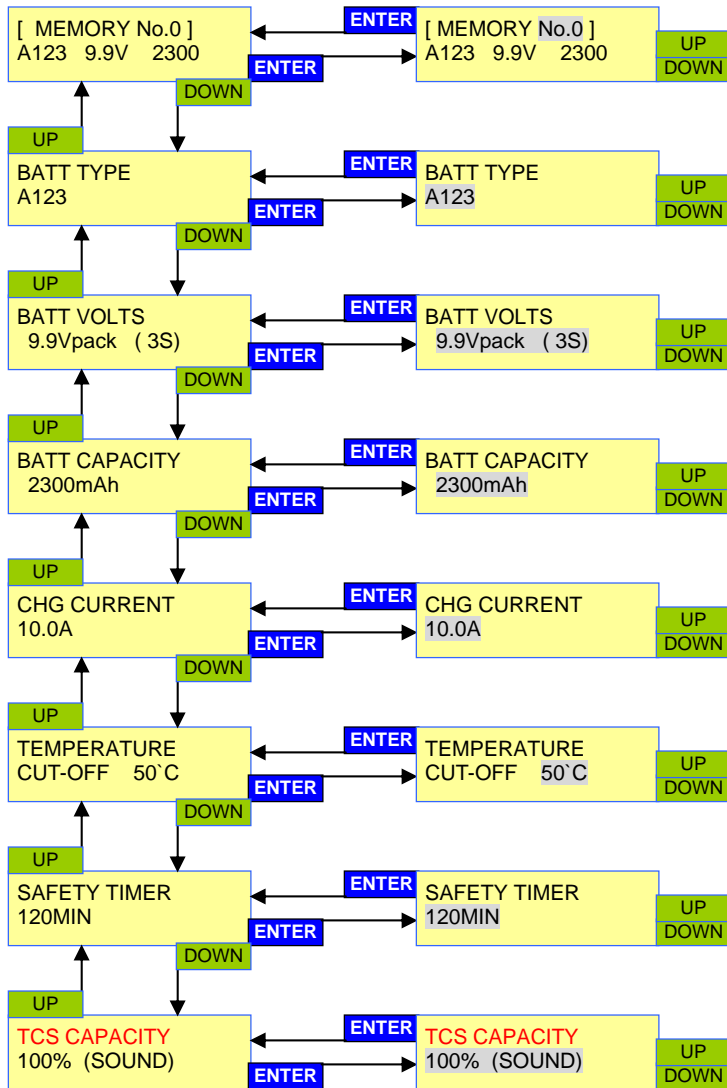


NiCd/NiMH

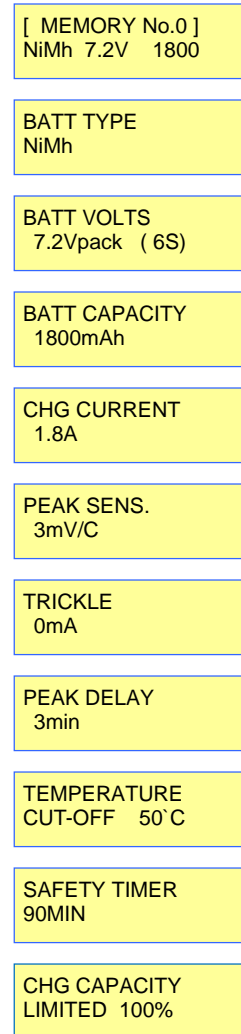


Pb

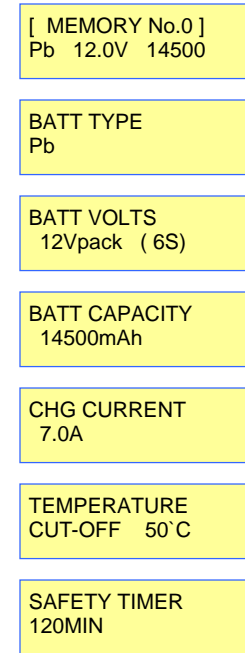


DATA VIEW DISPLAY

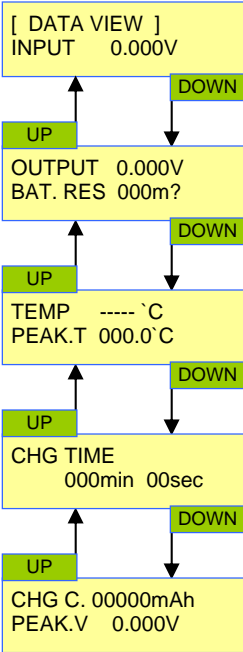

BALANCE INFORMATION DISPLAY

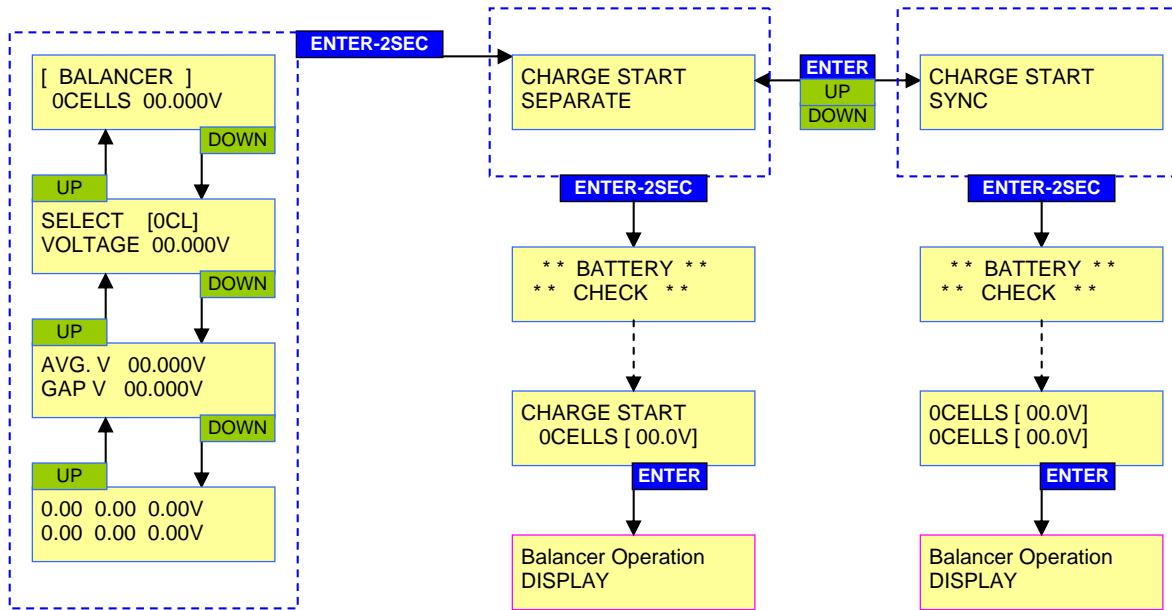


USER SETUP DISPLAY

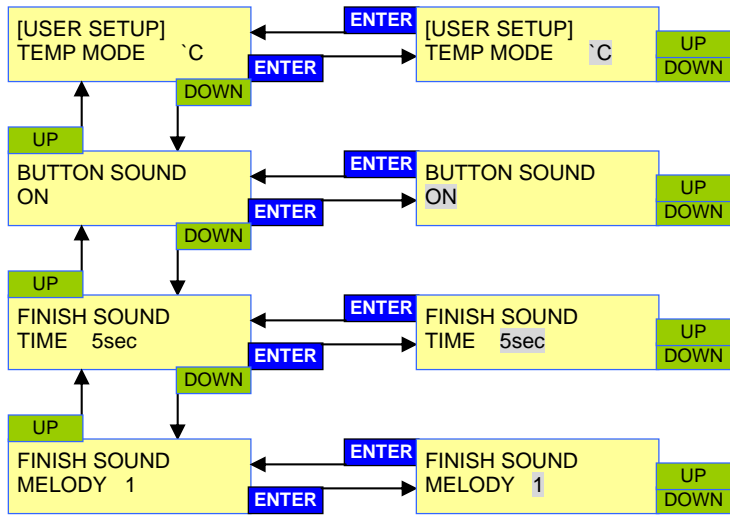


START SETUP ANZEIGE


> NiCd / NiMh Akku Start

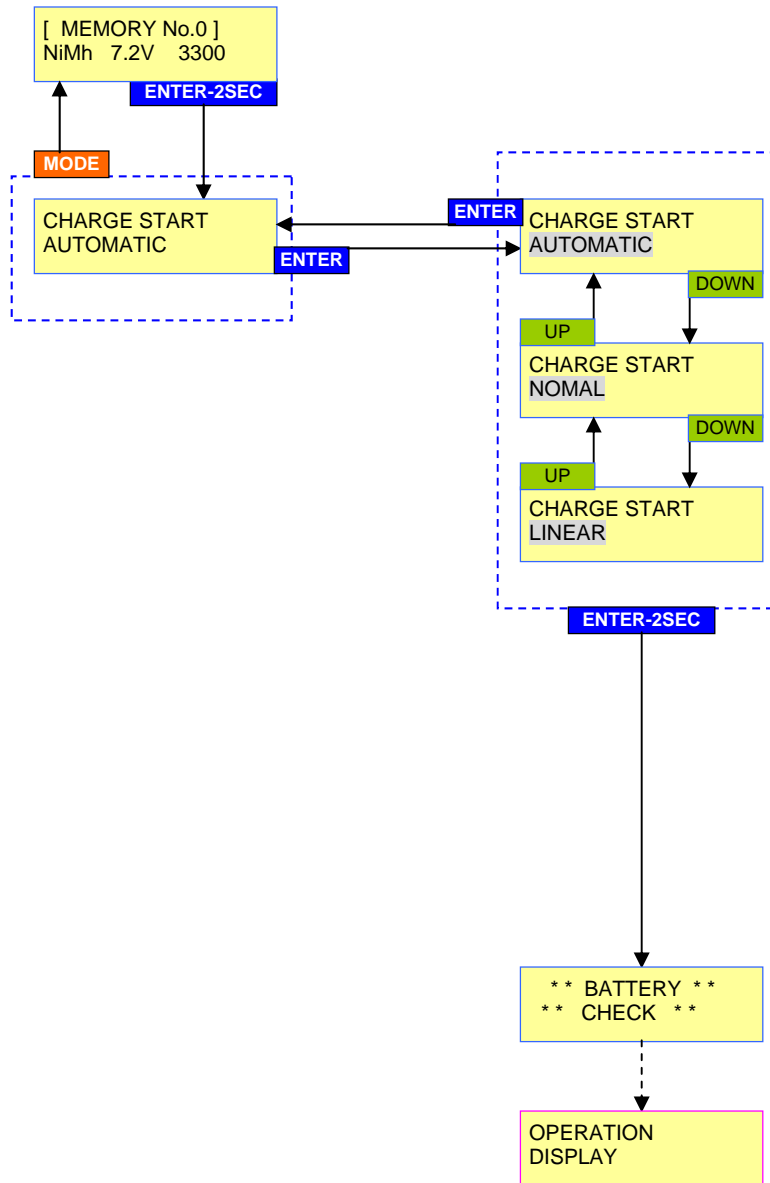

Lilo (Ion 3.6v) / LiPo (3.7v) / A123-LiFePO4 (3.3v) Akku Start

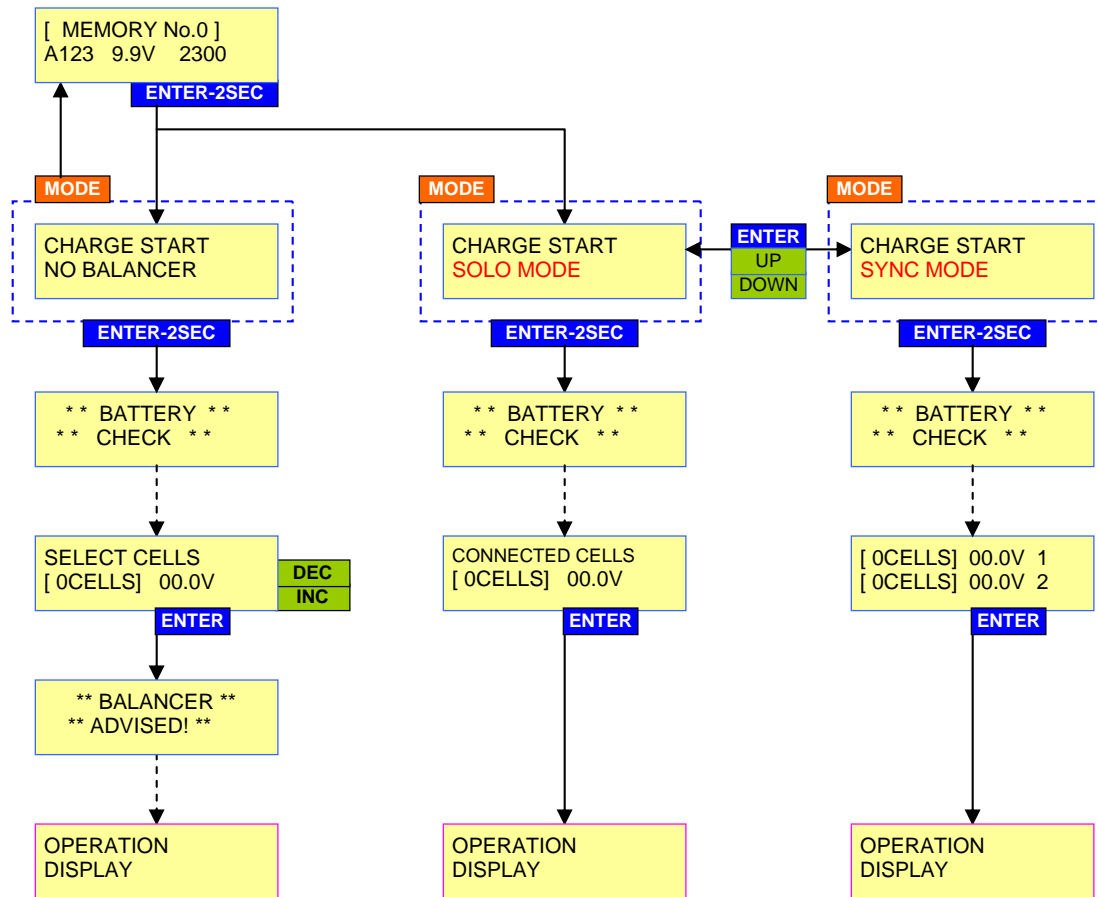

Bleiakku Start

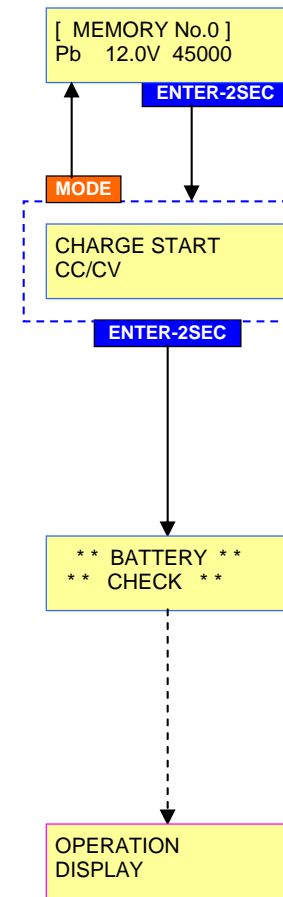

8. Anzeigen während des und nach dem Laden

